



GO² Workcenter Radiologist Tips

COTONADESKING forward thinking solutions





Workcenter Tips*

- > Vertical Desk Movement
- Press and hold the up or down arrow to move the desk to the desired height.
- The number represents the distance in centimeters from the desk to the floor and is consistent for all desks.
- If you find the 75 cm is the height you like, you can set it for any desk. If you get tired of sitting try reading in a standing position by raising the table.

Problem: The table won't move and the display is flashing all zeros.

Solution: Lower the table all the way down and continue holding the down arrow until the desk resets and the display shows 67, or 68, at that point the desk is reset and should function as normal. The table most likely lost power and lost its height calibration reference to the floor. Lowering the table all the way as stated above will recalibrate it.

> Fluorescent Light

- The fluorescent light can be adjusted by the user to provide the desired amount of ambient light. It has two adjustments:
- a. Rotating Lamp Shade Loosen the black thumb screws located at the ends of the shade and rotate the shade into the desired position.
- b. Brightness The brightness can be adjusted with a switch (shaped like a marble) located under the front edge of the desk next to the height control switch. Simply press and hold the switch, release once the desired brightness level is reached. A quick press and release will simply turn it off and on.

> Monitor Position

- Each monitor is mounted on an independent arm that allows the user to adjust height and angle independent of the desk movement.
- Please note that not all desks have all features, these are just the most common accessories.

coronadesking



Workcenter Tips*

> Task Light

Each desk has a task light with a red or white light source. The switch is found on the base.

> Power Dome

Each desk has a power dome on the desktop towards the back. Cell phones, iPods, laptops, etc., can be plugged into it.

> Pencil Tray

Located under the left side of the desk top. Rotate out for access.

> Paper Tray

The Xeno tray pivots independently on a center post and each tray can be slid to the left side or to the right. It can be mounted in one of four organizational holes on the desk top or mounted anywhere on the edge.

> Telephone Tray

Can be mounted anywhere along the rail on the workcenter. If mounted at the ends, it can be swiveled out of the way.

* Please note that not all desks have all features, these are just the most common accessories.