


## elements Series Glass Markerboard Framing Instructions non-magnetic or magnetic

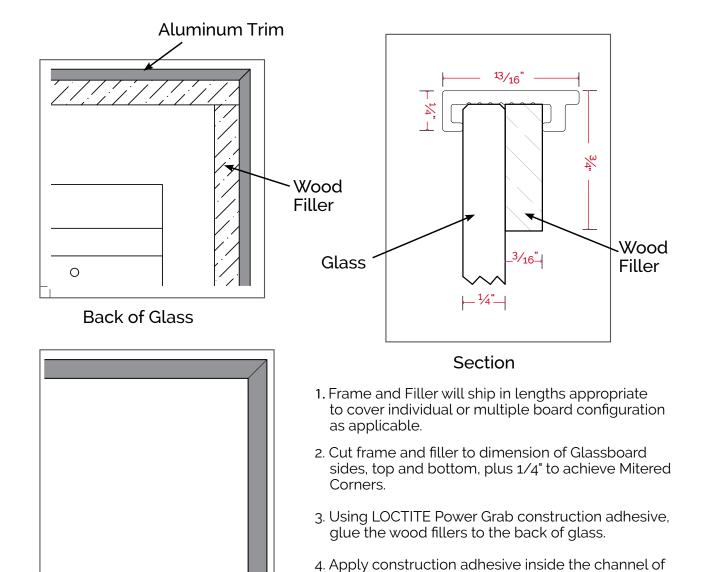

## **NOTES:**

\* When framing multiple panels within a single framed surround, hold 1/16" reveal between the glass panels.

prior to install.

the aluminum trim and attach to glass.

5. Allow at least 15 minutes for adhesive to set up

\*\*Once framed, board will require a shim on the wall behind the z-clips to allow for proper installation.



Front of Glass