

## Mobile Screen/Transport Cart Assembly Instructions

### Required tools:

- Tape Measure
- Standard Allen Wrench Set
- Caster Wrench

### Part List:

- A. Framed Porcelain Board
- B. Aluminum Feet (x2)
- C. Locking Caster (x2)
- D. Non-locking Caster (x2)
- E. Caster Spacer (x4)
- F. 3/8"-24 Flat Head Screw (x2)
- G. 1/4"-20 Flat Head Screw (x2)
- H. Handle (x2)
- I. Steel T-nut (x4)
- J. 1/4"-20 Socket Head Screw (x4)

### Instructions:

1. As shown in **Figure 1**, fit a caster spacer(E) onto one locking caster(C) and one non-locking caster(D) and screw them both into the bottom of one aluminum foot(B) using the provided caster wrench. Do this for both feet.

Note: For both locking casters to be located on the same side, assemble as pictured in **Figure 1** with one locking caster on the left of its foot and one on the right.



Figure 1

## Mobile Screen/Transport Cart Assembly Instructions

2. Lay the porcelain board(A) flat onto a table. Attach each foot to the board with screws F and G using their corresponding allen wrenches. **Figure 2.** The larger screw hole will be to the outside of the framed board. After both feet are attached, stand the cart up.



Figure 2

3. The handle(H) and its hardware(I,J) will be preassembled and ready to slide into the side of the cart as pictured in **Figure 3.** Locate the bottom of the handle 38" from the floor and tighten the screws.

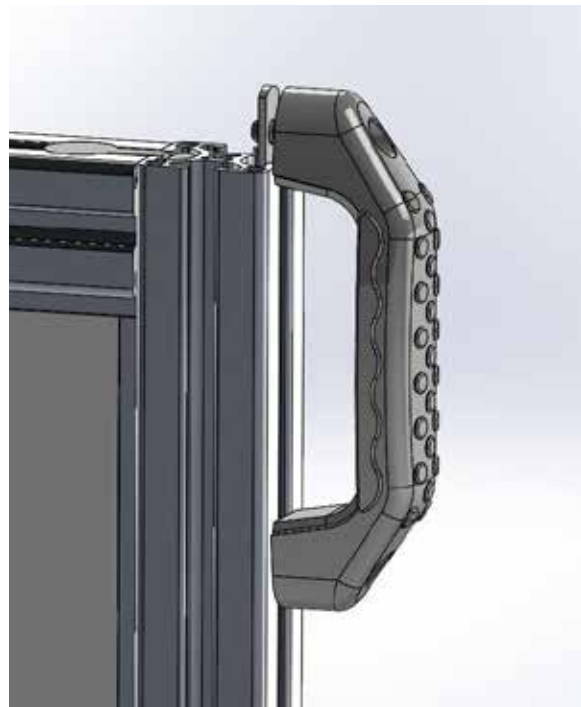


Figure 3